

Key functions



 
Key	Function	Action
A	Power on	Press the power button (A) for 2 seconds. The blue led light will turn on and the "Power On" voice notification will start to play. The device is now turned on and it will go into standby mode.
	Play	When in standby mode, press the power button (A) to hear "3, 2, 1, GO" audio notification. You are in swimming mode and the will music start to play.
	Stop	When music is playing, press the power button (A) for 2 seconds. You will hear a voice notification about your total swimming distance and total swimming time. The device will stop music and go into standby mode.
	Power off	When Beker is in standby mode, press the power button (A) for 2 seconds. The red led light will be turned on and starts to play a "Power Off" voice notification. Beker is now turned off.

Key functions




Key	Function	Action
B	Switch music	Press once to jump to the next song
C	Volume	When in swimming mode, press the '+' button once and the volume will be increased by one level. Press the '-' button once and the volume will be decreased by one level. There are a total of 9 levels. The loudest is level 9. If you keep pressing when in level 9 or 1 the device

Using Galerdo Beker

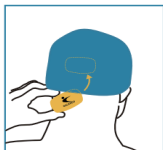


With a Swimming Cap

 If you are wearing a swimming cap, you can place the Baker on the back of your head directly underneath.

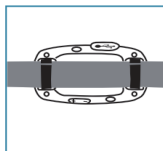

Without a Swimming Cap

 
If you are not wearing a swimming cap, you can insert the goggle belts through the strap holes under the Beker. You can then place the Beker near the center of the back of your head.

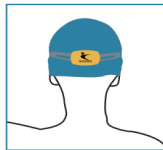

★For best results, it is highly recommended that you wear ear plugs so that any music or sound quality will not be distorted when you take a breath while swimming.


Charging Your Beker

There are 3 options for you to charge your Beker:

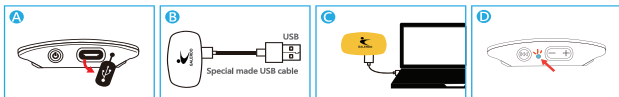


Connecting to PC or MAC

Use the USB cable provided to connect Beker to your PC or MAC. When charging the blue LED light will blink continuously. When charging has completed the blinking will stop.

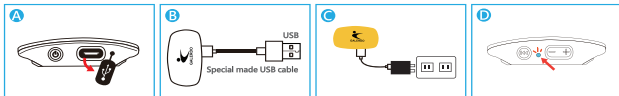

Connecting to the Power Adapter

Use the USB cable provided to connect Beker to your power adapter. You can use any standard 5V DC (> 1 Amp) power adapter equipped with a female USB socket. When charging the blue LED light will blink continuously. When charging has completed the blinking will stop.

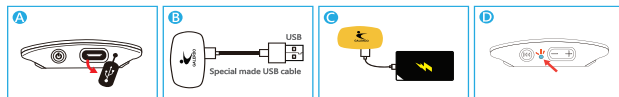

Connecting to a Portable Power Bank

Use the USB cable provided to connect Beker to your EMI/EMC certified portable power bank. When charging the blue LED light will blink continuously. When charging has completed the blinking will stop.

Specification	
Product Name	Waterproof music player
Brand	Galerdo
Model	Beker
Battery	Lithium battery , 300mA
OS supported	Windows10/ 8/ 7 / Vista / XP ; Mac
Music format	MP3
Songs play mode	Sequential play
Storage	8GB
Low battery notification	Voice notification.
Temperature range	0°C ~ 40°C
Speaker	Pizeo Vibrate Speaker
Size	7.4cm(L)x 4.1cm(W) x 1.8cm(H)
Play time	3~4 hours
Charging time	1 hours
Weight	34g
Waterproof	IPX8
Interface	Special magnetic designed connector

Limited Warranty

1. We provide a 1 year warranty (from the original date of purchase) due to defects in material, workmanship, or primary functions.
2. Conditions such as normal wear and tear, damage due to external force, subjective determination of sound quality, etc. are not covered under this warranty.
3. When requesting warranty service, please provide detailed information such as a sales receipt and location of purchase. Consumer's rights, under certain jurisdictions, may not be restricted under this limited warranty. If not restricted by law, this warranty may not be transferred to others.

Warning

1. Do not reformat the flash storage area of Beker, it will so that you will not accidentally erase the system files of Beker.
2. Do not use your hands to press the base of Beker. The speaker is located near the base. Excessive pressure may cause damage to the speaker.
3. Beker contains lithium-ion battery and various electronics components. Damage may occur if not properly used.
4. Beker is equipped with a special USB connector which contains stainless steel material. It may accumulate water scale if soaked in sea water for a long period of time. However, you can dip Q-tips in water and use it to wipe off the water scale when necessary.
5. Do not soak Beker in sea water or in hot springs for a long period of time. It is highly recommended that if you do use in these conditions to wash it with tap water immediately after you' re finished use.
6. This package contains a special USB cable for charging. It is directional. The connector on one side of the USB cable is printed with the "UP" word. You should use the connector end to connect to the stainless steel connector on Beker Pro. Please pay special attention to the position of the plug and the connection when inserting.
7. When charging using an external 5V USB power adapter, please make sure the output current is greater than 1 Amp to prevent any potential damage to the device.
8. Please do not disassemble, alter, or attempt to repair the Beker. Please do not expose Beker to fire, excessive heat conditions, or any hazardous environments.
9. Beker is certified with a IPX8 waterproof level. It can be submersed below 3 meters of water for one hour. Beker may be damaged due to excessive use conditions which may exceed the original product specifications.